



Automatic Safety Shut-Off System

Installing Replacement Thermocouple

NOTE: It is always recommended that a licensed plumber installs the Gas Lantern and replacement parts

NOTE: DO NOT OVERTIGHTEN BRASS

Step 1: Turn gas off inside the light and at the main line or the external shut off valve if so equipped.

Step 2: Remove the old thermocouple from the back of the safety valve with a 5/16 wrench.

Step 3: Screw in the new thermocouple and lightly tighten. Do not over-tighten.

Step 4: Follow the separate “Initial Set-Up” instructions to correctly position the thermocouple flame sensor and relight the fixture.

NOTE: If the flame sensor is constantly inside the flame, this will shorten the life expectancy of the thermocouple.



Step 1



Step 2