



521 Conti Street - New Orleans, LA 70130 - (504) 522-9485 – www.bevolo.com

WARNING:

Risk of fire or electric shock. This product is to be installed by a qualified, licensed electrician only. Installation must conform with all local codes or, in the absence of local codes, to the standard for Incandescent Lighting Fixtures ANSI/UL 1598. To reduce the risk of fire, use only type A19, 100 watt maximum. 60 watt or less is recommended.

INSTALLATION INSTRUCTIONS FOR BEVOLO ELECTRIC FIXTURES

1. After opening box, remove foam packing material to access light/bracket.
Note: If your light comes with a bracket, the bracket may be located under packing material.
2. Removal of glass panels from fixture may be necessary for certain installations.
3. **Bracket Mount:**
 - A. Secure bracket to wall or ceiling using proper mounting hardware (supplied by others).
Note: Bevolo cannot provide for every possible type of mounting surface, so your installer should determine and provide proper hardware based on mounting surface.
 - B. Place light into bracket for installation using “Original Bracket” or mount light to bracket using provided hardware.
4. **Flush Mount:**
 - A. Secure light using proper mounting hardware
5. Carefully replace any glass panes which were removed and press firmly down on clips to ensure glass is flush against copper legs.
6. Please leave these instructions and all other documentation with owner.

SUITABLE FOR DRY, DAMP AND WET LOCATIONS

Model: _____
Serial Number: _____



521 Conti Street - New Orleans, LA 70130 - (504) 522-9485 – www.bevolo.com

USER GUIDE FOR BEVOLO ELECTRIC FIXTURES

MAINTENANCE NOTES:

- This fixture is 100% hand made by master coppersmiths, therefore small marks and discoloration are in the nature of the product.
- Ensure that corrosive liquids are not sprayed on or near fixture.
- Salt Water Environments:
 - Lights can hyper oxidize to the point of flaking and turning red during the oxidation process before it reaches a Verdi Gris stage.
 - Lights should be rinsed periodically (monthly) and hinges oiled (bi-annual) to delay the effects of the corrosive environment.
 - Iron brackets will require upkeep to prevent rusting. Re-painting the brackets is recommended periodically depending on the environment the fixtures are in.

CLEANING GLASS AND LIGHT:

1. Prior to cleaning light or glass, turn off light and allow to cool for 5 minutes.
2. Glass panels and fixture body should be cleaned with soapy water.
3. Wipe glass panels dry to remove water spots.
4. If you must use glass cleaner, spray directly onto towel to avoid overspray onto copper surface which may cause discoloration.

REPLACEMENT PARTS AND PRODUCT SUPPORT:

- For replacement glass or parts, call (504) 522-9485 and ask for customer service or email gaslights@bevolo.com.
- For technical assistance, call (504) 522-9485 and ask for technical support or email gaslights@bevolo.com.



**Certified Energy Star Fixtures come with a 3 year
warranty on the Socket and Bulb Assembly.**

Please retain these instructions for future reference.

