



## **Electric Fixture Installation Notes**

### **FOR YOUR SAFETY - FIRE / SHOCK HAZARD**

1. Risk of fire or electrical shock. Electric products should ONLY be installed by a qualified, licensed electrician or installer.
2. Installation must conform with all local codes or, in the absence of local codes, to the standard for Incandescent Lighting Fixtures ANSI/UL 1598.
3. To reduce risk of fire 100-watts per fixture or less is recommended.
4. For standard and raised socket applications, use Medium base (E26) bulbs. For candelabra applications, use Candelabra base (E12) bulbs.

*Note: Bevolo recommends 60-watt equivalent and warm white for most applications.*

*Bulb shape is personal preferences.*

**WARNING: Failure to follow these instructions could result in fire or electric shock, which could cause property damage, personal injury or death.**

For **maintenance** and additional instructions please scan the QR code or visit:

**Bevolo.com/instructions**



**INTERTEK.COM/MARKS/ETL**  
**#3097503 #3041856 #9700712**



*\*Installers: Please leave this sheet with the homeowner.*

### **INSTALLATION INSTRUCTIONS** **FOR HANGING STEM ELECTRIC FIXTURES**



**NOTE:** Installations must always conform to local and national codes. Contact Bevolo technical support with any questions.

**NOTE:** Two people are required to safely install this fixture.


\*See installation drawing for reference.

1. Test fit location where fixture/bracket will be installed, confirm it is level. Mark and drill holes and ensure there is suitable material and support for a secure installation.
2. Attach stem to coupler. Do not tighten set screw at this time.
3. Route wiring through stem and attach fixture to bracket (for Yoke.) See Detail 'B', both drawings.
4. Properly connect fixture wiring to electrical source and ground.
5. Secure bracket to ceiling using proper mounting hardware (supplied by others). **Note:** Installers must determine and provide appropriate hardware for the specific mounting surface and environment.
6. Orient fixture with access door facing primary approach. Tighten set screw to secure orientation. Do not overtighten.

FOR COMPLETE INSTALLATION INSTRUCTIONS AND SAFETY WARNINGS, REFERENCE THE YELLOW "ELECTRIC INSTALLATION AND USER GUIDE" INCLUDED WITH YOUR FIXTURE OR VISIT: [BEVOLO.COM/INSTRUCTIONS](http://BEVOLO.COM/INSTRUCTIONS)

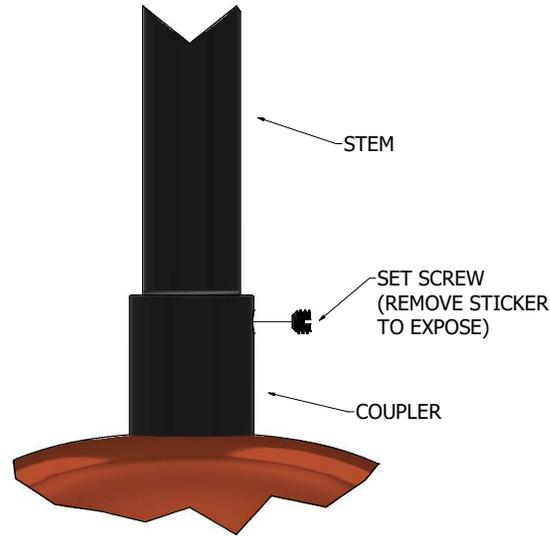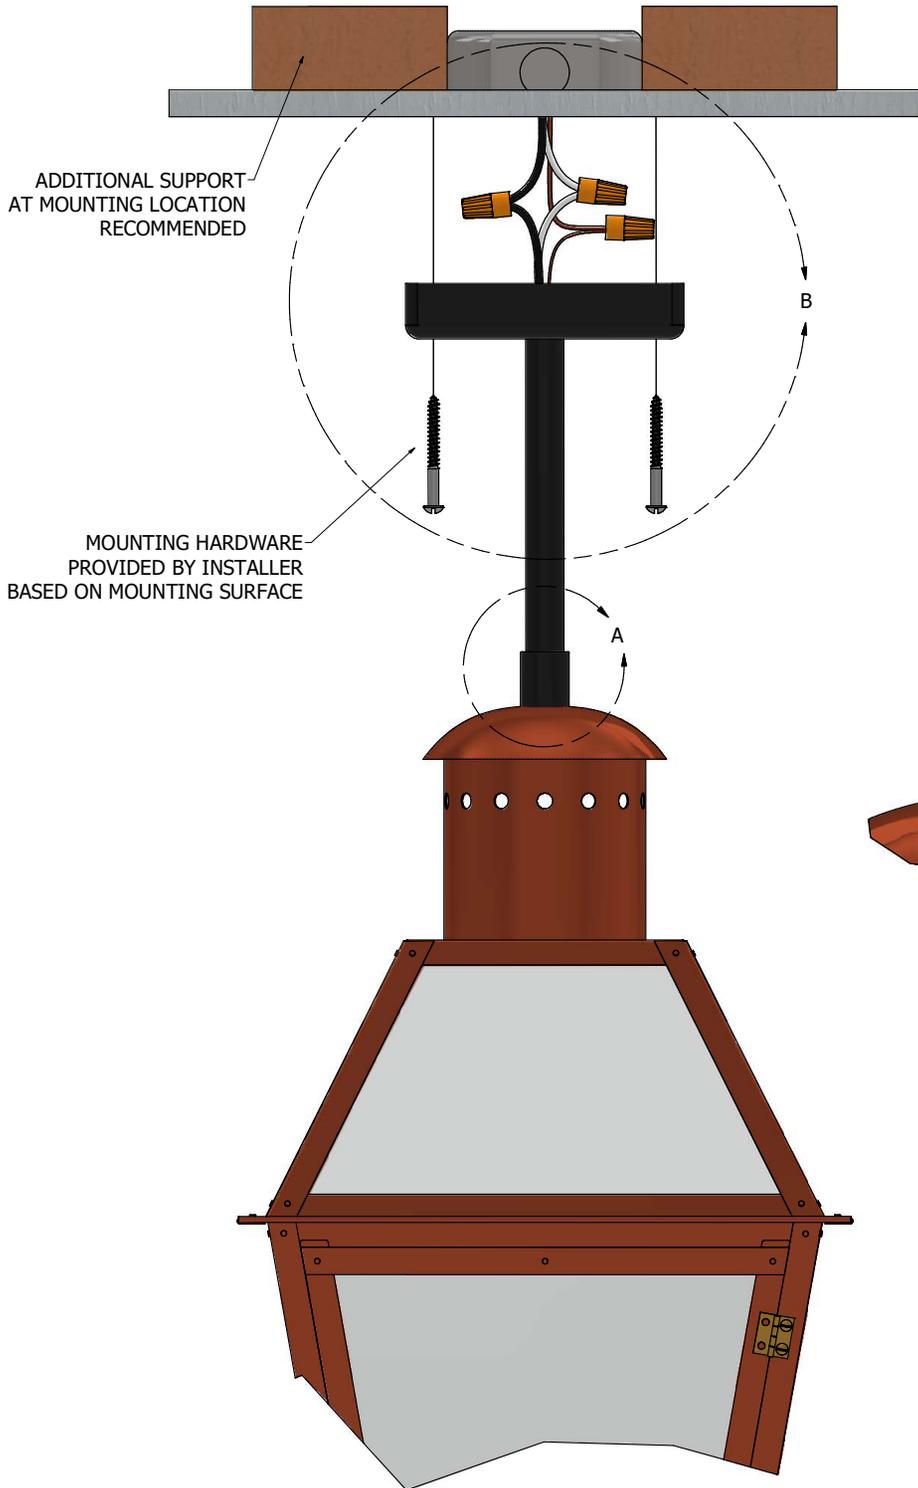

**DETAIL A**  
TIGHTEN SET SCREW (BACK SIDE OF BRACKET) AFTER ATTACHING STEM TO COUPLER

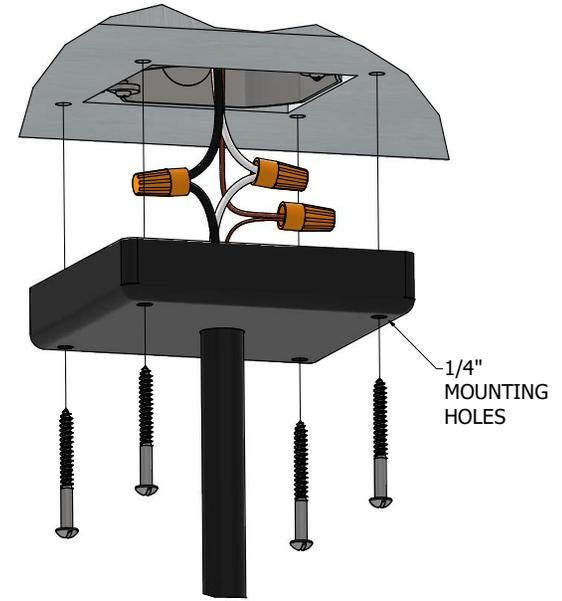

**DETAIL B**  
BRACKET MOUNTS DIRECTLY TO CEILING. BRACKET DOES NOT MOUNT TO JUNCTION BOX.

**BEVOLO GAS & ELECTRIC LIGHTS**

**HANGING STEM**

COPYRIGHT 2024, BEVOLO GAS & ELECTRIC LIGHTS. THIS DRAWING AND ANY DESIGN OR DATA CONTAINED THEREIN ARE CONSIDERED PROPERTY OF BEVOLO GAS AND ELECTRIC LIGHTS. NEITHER THE DRAWING NOR ITS CONTENT MAY BE COPIED, REPRODUCED, OR EDITED TO A LIKENESS WITHOUT THE WRITTEN CONSENT OF BEVOLO GAS AND ELECTRIC LIGHTS.