

## **Gas Fixture General Installation Notes:**

1. Gas fixtures are designed for outdoor installation only, unless equipped with our Automatic Safety Shut-Off System w/ Flame Sensor.
2. Installers must determine and provide appropriate hardware for the specific mounting surface and environment.
3. Fixtures must be installed at least 3" from combustible walls and 12" from combustible ceilings.
4. Although fixtures are equipped with a control valve, it is recommended that an additional shut-off valve (supplied by others) is installed upstream of fixture, and may be required by local code.
5. Make sure all gas lines have been fully bled before attaching the gas line to fixture.
6. For use with propane, contact your gas supplier for an appropriate low-pressure regulator.

## **Gas Fixture Specifications:**

- **Natural Gas**
  - BTU Rating: 800-1200 BTU per hour
  - Minimum Working Pressure: 2" WC or 0.07 PSI
  - Recommended Working Pressure: 7" WC or 0.25 PSI
  - **Maximum Working/Test Pressure: 13.7" WC or 0.5 PSI**
- **Propane Gas (LPG)**
  - BTU Rating: 1200-1500 BTU per hour
  - Minimum Working Pressure: 2" WC or 0.07 PSI
  - Recommended Working Pressure: 11" WC or 0.4 PSI
  - **Maximum Working/Test Pressure: 13.7" WC or 0.5 PSI**

For **maintenance** and additional instructions please scan the QR code or visit:

**Bevolo.com/instructions**



**INTERTEK.COM/MARKS/ETL**  
**#3097503 #3041856 #9700712**



*\*Installers: Please leave this sheet with the homeowner.*



## **INSTALLATION INSTRUCTIONS** **FOR POST MOUNT GAS FIXTURES**

**NOTE: Installations must always conform to local and national codes. Contact Bevolo technical support with any questions.**


**NOTE: Two people are required to safely install this fixture.**

*\*See installation drawing for reference.*

1. To avoid kinking the gas line, coil 1/4" line at top of post tenon.
2. Orient fixture with door facing primary approach.
3. Connect 1/4" copper tubing at gas supply to 1/4" compression fitting attached to gas jet.
4. Lower fixture onto tenon while tucking coiled gas line into post tenon. See Detail 'A' and 'Installation Tip' on drawing.
5. Secure post mount bracket to post tenon using supplied set screws.
6. Run the necessary LOW-pressure test for leaks. **Note:** Gas fixtures must be either disconnected from the gas supply or isolated by closing upstream shutoff valve during any pressure test of the system at test pressures more than 1/2 psi. Pressures exceeding 1/2 psi may damage valve assembly.
7. *Lighting the fixture:* With lighter/flame just above the porcelain burner tip, turn brass valve counterclockwise approximately 1/8 turn until flame appears. Adjust flame to recommended height: (1" to 1.5" for 21" and smaller fixtures 1.5" to 2" for fixtures larger than 21".) **Note: Do not operate fixture with gas valve fully open or flame height greater than 3". This may result in damage to your fixture due to excessive heat.**

FOR COMPLETE INSTALLATION INSTRUCTIONS AND SAFETY WARNINGS, REFERENCE THE GREEN "GAS INSTALLATION AND USER GUIDE" INCLUDED WITH YOUR FIXTURE OR VISIT:

[BEVOLO.COM/INSTRUCTIONS](http://BEVOLO.COM/INSTRUCTIONS)

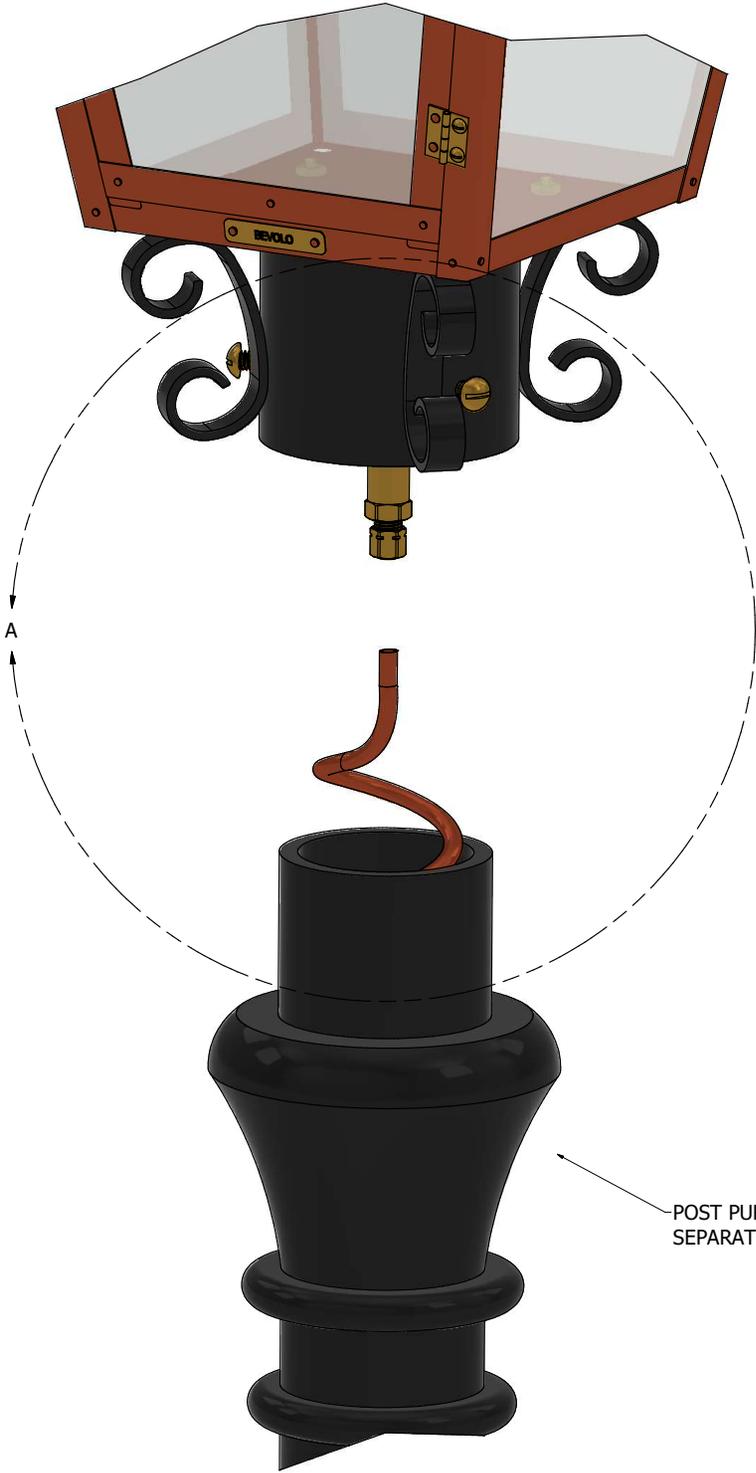

CONNECT 1/4" COMPRESSION FITTING (INCLUDED WITH FIXTURE) TO 1/4" GAS LINE (PROVIDED BY INSTALLER)

ONCE FIXTURE IS LOWERED ONTO THE TENON, TIGHTEN THE (3) SET SCREWS TO SECURE BRACKET

INSTALLATION TIP: TO AVOID KINKING THE GAS LINE DURING INSTALLATION, COIL THE 1/4" LINE SO IT CAN BE RAISED/LOWERED INTO THE POST AS REQUIRED

POST PURCHASED SEPARATELY

DETAIL A  
GAS LINE AND BRACKET CONNECTION

**BEVOLO GAS & ELECTRIC LIGHTS**

**POST MOUNT INSTALLATION - GAS**

COPYRIGHT 2024, BEVOLO GAS & ELECTRIC LIGHTS. THIS DRAWING AND ANY DESIGN OR DATA CONTAINED THEREIN ARE CONSIDERED PROPERTY OF BEVOLO GAS AND ELECTRIC LIGHTS. NEITHER THE DRAWING NOR ITS CONTENT MAY BE COPIED, REPRODUCED, OR EDITED TO A LIKENESS WITHOUT THE WRITTEN CONSENT OF BEVOLO GAS AND ELECTRIC LIGHTS.